

4smarts

**WIRELESS HEADPHONES
SKYBUDS WAVE**



Thank You 

for choosing a quality product from **4smarts**

01 Usage Information

Please read this manual carefully before using your 4s SkyBuds Wave headset and observe all safety instructions. Keep it for future reference – you can also download it from <https://www.4smarts.com>.

02 Technical Specifications

Model name: 4s SkyBuds Wave

Battery: 200 mAh Li-ion

Charging port: USB-C

Input: DC 5V / 1A

Charging time: approx. 1 hour

Playback time: up to 10 hours (at 50% volume)

Bluetooth version: 5.4

Range: over 10 m

Frequency range: 2402–2480 MHz

Speaker: Ø40 mm, 32 Ω \pm 10%

Sensitivity: 112 \pm 3dB

03 Safety Instructions

Do not drop the headset or expose it to strong impacts.

Keep it away from dirt, moisture and extreme temperatures.


Use only in dry environments.

Do not open or use the device if it is damaged.

Only use chargers with max. DC 5V / 1A.

Charge the battery regularly, especially if stored for a longer period.

Do not use water or harsh cleaning agents to clean the device.

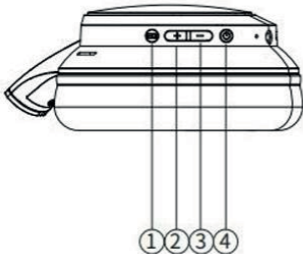

04 Operation

EQ button (1)

Press this button to switch between the sound profiles Bass, Pop, and Vocal to match your personal listening preference. Double-press to activate the voice assistant (e.g. Siri or Google Assistant).

“+” button (2)

Press briefly to increase the volume.

Next song: Press and hold button (2) for around 2 seconds.

“-” button (3)

Press briefly to decrease the volume.

Previous song: Press and hold button (3) for around 2 seconds.

Multifunction “0” button (4)

Power on/off: Press and hold the button for 2–3 seconds.

Play/pause: Press briefly to play or pause music.

Answer/end calls: Press once during an incoming call.

Reject call: Press and hold for approx. 2 seconds.

Redial last number: Quickly press the button twice.

Bluetooth & charge indicator (5)

The LED shows the current Bluetooth connection and battery status.

AUX mode (6)

Connect a 3.5 mm audio cable – ideal when the battery is empty. Important: If the cable is plugged in while the headset is turned on, it will automatically power off. To return to Bluetooth mode, unplug the audio cable and turn the headset on again.

USB-C charging port (7)

Use the included USB-C cable to charge your headset.

The LED glows red while charging and turns blue when fully charged.

Microphone (8)

Captures your voice clearly during calls or when using a voice assistant (e.g. Siri or Google Assistant).

05 Bluetooth Connection

Press and hold the multifunction button (button 4) for about 2 seconds to turn the headset on.

The red and blue LEDs will flash alternately – pairing mode is active.

Activate Bluetooth on your smartphone or tablet and select **4s SkyBuds Wave** from the device list.

Once connected, the blue LED blinks every 6 seconds.

If no connection is established, the headset automatically powers off after approx. 5 minutes.

06 LED Indicator Meanings

Once your headset is successfully connected to a device, the blue LED blinks every 6 seconds.

In pairing mode, the red and blue LEDs flash alternately, indicating that the headset is ready to pair.

While charging, the red LED stays on continuously.

When fully charged, the LED changes to solid blue.

If the battery is low, the red LED blinks slowly and a warning sound is played at intervals.

During a reset, the red and blue LEDs flash alternately.

When turning off, the red LED lights up briefly and then turns off.

07 Troubleshooting

Headset won't turn on

- Battery empty? Please fully charge the headset.
- Press and hold the “0” button (4) for at least 2 seconds.

Bluetooth pairing not working

- Make sure the headset is in pairing mode (red/blue flashing LED).
- Disable other nearby Bluetooth devices temporarily.
- Remove “4s SkyBuds Wave” from the device list and try again.

Audio interruptions or delay

- Make sure your device is within 10 m range.
- Avoid obstacles like walls or metal surfaces between headset and device.

Charging problems

- Only use chargers supporting DC 5V / 1A.
- Check that the USB-C cable is properly connected.

Factory reset

- Quickly press the “0” button (4) five times.
- Red and blue LED will flash alternately – reset complete.

08 Maintenance and Care

Clean the headset only with a dry, soft cloth.

Avoid contact with moisture or cleaning agents.

Store the device in a dry place away from direct sunlight or heat.

Do not use harsh or chemical cleaners – they may damage the materials.

09 Warranty

4smarts GmbH assumes no liability or warranty for damage caused by improper installation, misuse, or failure to follow these instructions.

For more warranty information, visit: <https://www.4smarts.com>.

10 Service and Support

If you have any questions, issues or defective products, feel free to contact our customer support:

Mon–Fri, 9:00 AM–5:00 PM

+49 (0) 821 20708444

customer-service@4smarts.com

<https://www.4smarts.com/contact>

11 Declaration of Conformity

Hereby, 4smarts GmbH declares that this product complies with the essential requirements of applicable EU directives. You can find the full Declaration of Conformity at: <https://www.4smarts.com>.

01 Nutzungsinformationen

Lies dir vor der ersten Nutzung deines 4s SkyBuds Wave Headsets diese Anleitung sorgfältig durch und beachte die Sicherheitshinweise. Bewahre sie für später gut auf – du findest sie auch als Download auf <https://www.4smarts.com>.

02 Technische Daten

Modellname: 4s SkyBuds Wave

Batterie: 200 mAh Li-ion

Ladeanschluss: USB-C

Eingangsspannung: DC 5V / 1A

Aufladezeit: ca. 1 Stunde

Musikwiedergabezeit: bis zu 10 Stunden (bei 50% Lautstärke)

Bluetooth-Version: 5.4

Reichweite: über 10 m

Frequenzbereich: 2402–2480 MHz

Lautsprecher: Ø40 mm, 32 Ω ± 10 %

Empfindlichkeit: 112 ± 3 dB

03 Sicherheitshinweise

Lass das Headset nicht fallen und schütze es vor starken Erschütterungen.

Halte das Gerät fern von Schmutz, Feuchtigkeit und extremen Temperaturen.


Nutze es ausschließlich in trockenen Räumen.

Öffne das Gerät nicht selbst und verwende es bei Schäden nicht weiter.

Nutze nur Ladegeräte mit maximal DC 5V / 1A.

Achte darauf, dass die Akkus regelmäßig aufgeladen werden – vor allem bei längerer Nichtbenutzung.

Verwende keine scharfen Reinigungsmittel oder Wasser zur Reinigung.

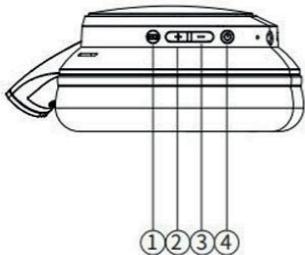

04 Bedienung

EQ-Taste (1)

Drücke diese Taste, um zwischen den Klangprofilen Bass, Pop und Gesang zu wechseln. So passt du den Sound an deinen Geschmack an.

Doppelklicke, um den Sprachassistenten (z.B. Siri oder Google Assistant) zu aktivieren.

„+“-Taste (2)

Drücke kurz, um die Lautstärke zu erhöhen.

Nächster Titel: Halte die Taste (2) etwa 2 Sekunden lang gedrückt.

„-“-Taste (3)

Drücke kurz, um die Lautstärke zu verringern.

Vorheriger Titel: Halte die Taste (3) etwa 2 Sekunden lang gedrückt.

Multifunktions-taste „0“ (4)

Ein- und Ausschalten: Halte die Taste 2–3 Sekunden gedrückt.

Wiedergabe / Pause: Drücke kurz zum Starten oder Pausieren der Musik.

Anrufe annehmen / auflegen: Drücke einmal bei eingehendem Anruf.

Anruf ablehnen: Halte die Taste ca. 2 Sekunden gedrückt.

Letzten Anruf wiederholen: Drücke die Taste zweimal schnell hintereinander.

Bluetooth- & Ladeanzeige (5)

Die LED zeigt den aktuellen Bluetooth-Status und den Akkuzustand an.

AUX-Modus (6)

Schließe ein 3,5 mm Audiokabel an – ideal, wenn der Akku leer ist.

Wichtig: Wird das Kabel bei eingeschaltetem Gerät eingesteckt, schaltet sich das Headset automatisch aus.

Zum Zurückkehren in den Bluetooth-Modus, ziehe das Audiokabel ab und schalte das Headset erneut ein.

USB-C Ladeanschluss (7)

Nutze zum Aufladen das beiliegende USB-C Kabel.

Während des Ladevorgangs leuchtet die LED rot. Wenn der Akku voll ist, leuchtet sie blau.

Mikrofon (8)

Für klare Sprachqualität bei Anrufen oder bei Nutzung eines Sprachassistenten (z.B. Siri oder Google Assistant).

05 Bluetooth-Verbindung

Halte die Multifunktionstaste (Taste 4) ca. 2 Sekunden lang gedrückt, um das Headset einzuschalten.

Die rote und blaue LED blinken abwechselnd – das Headset befindet sich nun im Pairing-Modus.

Aktiviere Bluetooth auf deinem Smartphone oder Tablet und wähle in der Geräteliste **4s SkyBuds Wave** aus.

Nach erfolgreicher Verbindung blinkt die blaue LED alle 6 Sekunden.

Wird keine Verbindung aufgebaut, schaltet sich das Headset nach ca. 5 Minuten automatisch aus.

06 Bedeutung der LED-Anzeigen

Sobald dein Headset erfolgreich mit einem Gerät verbunden ist, blinkt die blaue LED alle 6 Sekunden.

Im Pairing-Modus blinken die rote und blaue LED abwechselnd – das bedeutet, dass das Headset bereit zum Koppeln ist.

Während des Ladevorgangs leuchtet die rote LED dauerhaft.

Ist der Akku vollständig geladen, wechselt die LED auf durchgehend blau.

Wenn der Akku fast leer ist, blinkt die rote LED langsam und es ertönt in regelmäßigen Abständen ein akustisches Warnsignal.

Beim Zurücksetzen des Headsets blinken die rote und blaue LED abwechselnd.

Beim Ausschalten leuchtet die rote LED kurz auf und erlischt dann.

07 Fehlerbeseitigung

Headset lässt sich nicht einschalten

– Ist der Akku leer? Bitte lade das Headset vollständig auf.

– Halte die „0“-Taste (4) mindestens 2 Sekunden lang gedrückt.

Bluetooth-Kopplung funktioniert nicht

- Stelle sicher, dass sich das Headset im Pairing-Modus befindet (rote/blau blinkende LED).
- Deaktiviere andere Bluetooth-Geräte in der Nähe, die stören könnten.
- Entferne „4s SkyBuds Wave“ aus der Geräteliste und starte die Kopplung neu.

Ton unterbrochen oder verzögert

- Stelle sicher, dass dein Gerät nicht weiter als 10 m entfernt ist.
- Vermeide Hindernisse wie Wände oder Metallflächen zwischen Headset und Gerät.

Akkuprobleme oder Ladevorgang funktioniert nicht

- Verwende nur Ladegeräte mit DC 5V / 1A.
- Prüfe, ob das USB-C-Kabel richtig angeschlossen ist.

Zurücksetzen auf Werkseinstellungen

- Drücke die „0“-Taste (4) fünfmal schnell hintereinander.
- Die rote und blaue LED blinken nun abwechselnd – das Headset wurde zurückgesetzt.

08 Wartung und Pflege

Reinige das Headset nur mit einem trockenen, weichen Tuch.

Vermeide den Kontakt mit Feuchtigkeit oder Reinigungsmitteln.

Bewahre das Gerät an einem trockenen Ort auf, fern von direkter Sonneneinstrahlung oder Hitzequellen.

Verwende keine aggressiven oder chemischen Reinigungsmittel – sie können das Material beschädigen.

09 Gewährleistung

Die 4smarts GmbH übernimmt keinerlei Haftung oder Gewährleistung für Schäden, die durch unsachgemäße Installation, Nutzung oder Nichtbeachtung dieser Anleitung entstanden sind.

Mehr Informationen zur Gewährleistung findest du unter: <https://www.4smarts.com>.

10 Service und Support

Bei Fragen, Problemen oder Defekten kannst du dich jederzeit an unseren Kundenservice wenden:

Mo–Fr, 09:00–17:00 Uhr

+49 (0) 821 20708444

customer-service@4smarts.com

<https://www.4smarts.com/contact>

11 Konformitätserklärung

Hiermit erklärt die 4smarts GmbH, dass sich dieses Produkt in Übereinstimmung mit den grundlegenden Anforderungen der EU-Richtlinien befindet. Die vollständige Konformitätserklärung findest du unter:

<https://www.4smarts.com>.

4smarts

Thanks for buying our product! We at 4smarts are sure it will serve you well. Follow us on social media for news, customer support and to win great prizes. See you there!



[@4smarts_official](#)



facebook.com/4smarts



linkedin.com/company/4smarts



All listed brands are trademarks of the corresponding companies.
Errors and omissions excepted, and subject to technical changes.
Our general terms of delivery and payment are applied.